



DEMON SLAYER TAMAGOTCHI

©Koyoharu Gotoge / SHUEISHA, Aniplex, ufotable
© Bandai, WIZ

Age 6+

MADE IN CHINA
Manufactured for Bandai America Incorporated,
2120 Park Place, Suite 120, El Segundo, California
90245
Actual size, color, style and decoration may vary. Bandai logo:

INSTRUCTION SHEET



⚠ Caution

- If you use the battery incorrectly, it may cause heat generation, damage, or leakage.
- If the fluid leaking from the battery gets into your eyes, immediately wash your eyes with a lot of water and consult a doctor. If it gets on your skin or clothes, wash it with water.
- Only use batteries of the same or equivalent type as indicated. Batteries must be inserted with the correct polarity.
- Do not short-circuit the supply terminals. Do not mix alkaline, standard carbon-zinc or rechargeable batteries, or different type of batteries. Do not mix new and used batteries. Remove batteries when not in use or discharge.
- Store unused batteries in their packaging and away from metal objects which can cause a short-circuit.
- This product is made precisely. It may be damaged if excessive force is applied or dropped.



Do not put in mouth




Do not submerge the product in water or operate it with wet hands as it may cause malfunction. Also, please avoid using it in a humid place.

As the device is small, be careful to not leave the device in your pocket when washing clothes.

<<Precautions>>

- Please note that we cannot cover loss of data.
- Discard plastic packaging immediately after opening.
- Do not place this product on a resin sofa, seat, tile, etc. The color may transfer if you are in contact for a long time.
- Do not pull or bend the moving part or the mounted part in an unreasonable direction.
- The set batteries are for testing. If the screen display becomes difficult to see, replace all button batteries with new ones.
- This product is composed of precision electronic components. Do not drop it, wet it with water, stain it, or disassemble it. Also, avoid using or storing in places with high or low temperatures.
- If it malfunctions, press the reset switch and turn on the power again.
- Clock accuracy: Within ± 10 seconds per day.
- Please be aware that some of the Japanese pronunciations may have different intonations or may be difficult to hear due to the characteristics of the product.

Device Instructions

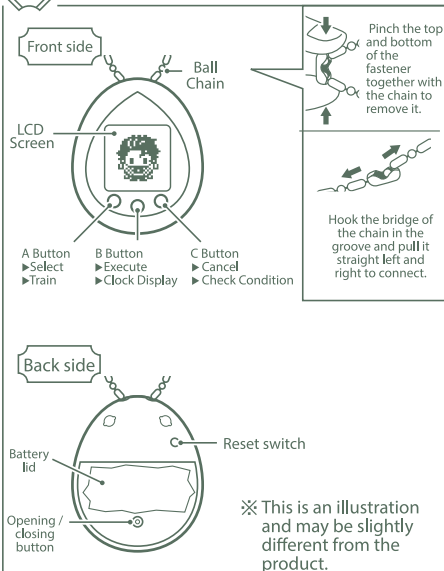

Join the Demon Slayer Corps

1. Remove the insulation sheet from the bottom of the main unit. A beep sounds and the clock setting screen appears.



2. <How to Reset>
Press the reset switch on the back of the main unit with a thin stick. A beep sounds.
Do not press the reset switch strongly with a sharp stick or the lead of a mechanical pencil. There is a risk of damage.
Be sure to press the reset switch after replacing the batteries.



3. <Clock Settings>
Select the current time by pressing the A button in the order of "hour" to "minute". Confirm with the B button. Press C to return to the previous selection.



"AM" means morning and "PM" means afternoon.

4. <Join the Demon Slayer Corps>
When the clock setting is completed, the screen will show passing the Final Selection. After that, enlistment in the Demon Slayer Corps is approved and uniforms are provided.



- ※ Please reset if the screen appears strange or it malfunctions.
- ※ This product can not save data when you change the battery or reset. The history of play so far will be reset, so please be careful.

Clock

How to display the clock.

Press B on the Demon Slayer display screen to display the clock screen. Press B again to return to the Demon Slayer display screen.

How to adjust the clock.

Press the B button to display the clock screen, and press the A button while holding down the C button to display the clock setting screen. After that, it is the same as <Clock Setting> in the "Join the Demon Slayer Corps" section.

Turn Sound On / Off

When the A button is pressed while holding down the C button on the Demon Slayer display screen, the sound ON / OFF selection screen is displayed. Select (ON) or (OFF) with the A button. Press the B button to confirm. Be careful, as there are no alerts when the sound is off.




Replacing Batteries

When the batteries are exhausted, the LCD screen becomes difficult to see, and then all operations are disabled. If the Battery Low Icon appears, replace with new batteries.



1. While pressing the opening / closing protrusion on the back of the main unit with a thin object (Fig. ①), open it by sliding down the battery lid (Fig. ②).
2. Take out the exhausted battery and set a new button battery (LR44 x 2, sold separately) so that the + and - are not mistaken. Be sure to replace both of them.
3. Close the battery lid.

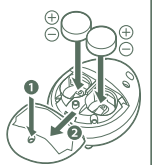

Be sure to reset by following directions in <How to Reset> in the "Join the Demon Slayer Corps" section.